


APPLICATION NOTE



ACTIV8 – IRIS

The width of the IR detection field depends on the installation height

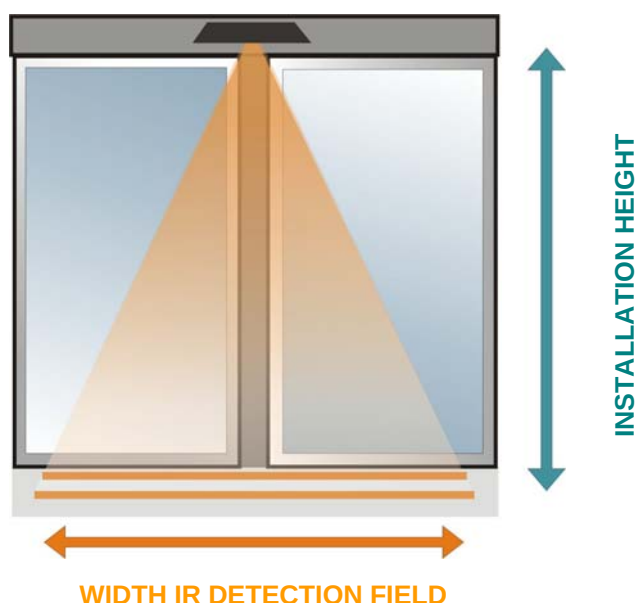

INSTALLATION HEIGHT (in meter*)	WIDTH IR DETECTION FIELD (in meter*)	
	PRISM FOR WIDE FIELD	PRISM FOR NARROW FIELD
2,00 m	2,00 m	1,00 m
2,20 m	2,20 m	1,10 m
2,50 m	2,50 m	1,25 m
3,00 m	3,00 m	1,50 m
3,50 m		1,75 m
4,00 m		2,00 m
Calculation	Installation height = width	Installation height / 2 = width

*Please note that these values are estimated and can differ depending on the application.