


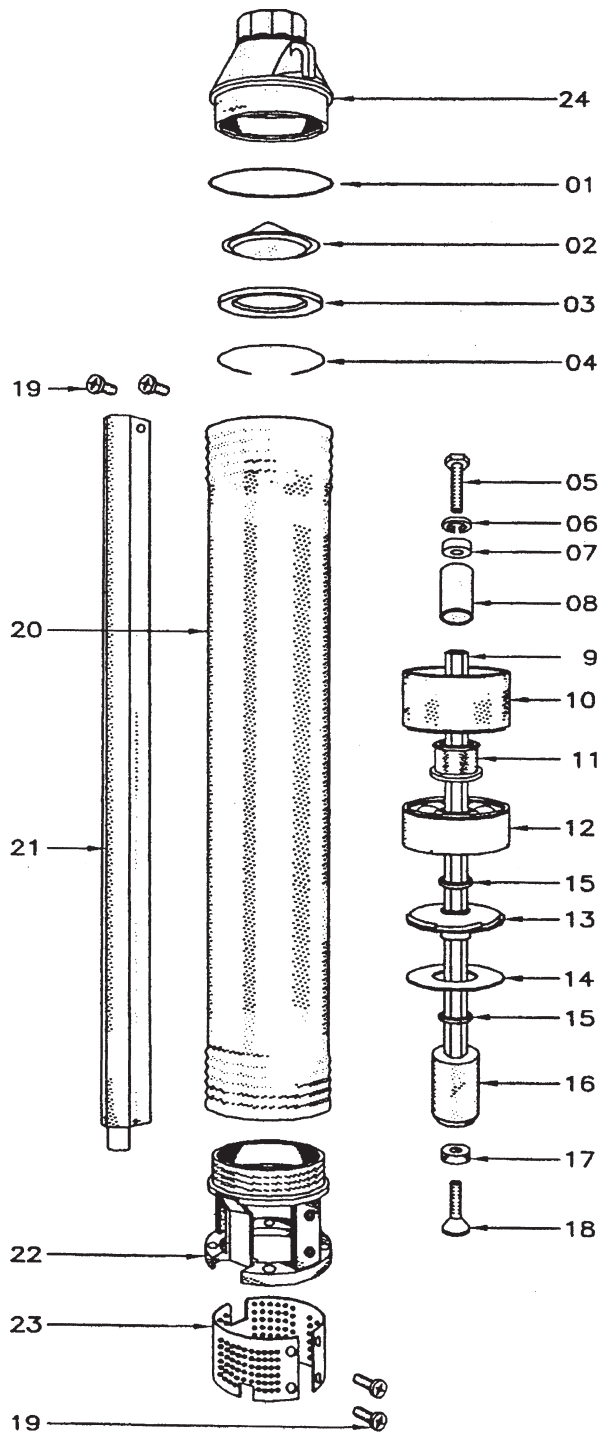

Componentes

Nº	Descripción
01	Junta tórica
02	Válvula de retención
03	Anillo de estanqueidad
04	Anillo de seguridad
05	Tornillo
06	Arandela de presión
07	Arandela
08	Distanciador superior
09	Cojinete superior
10	Casquillo de goma esp.
11	Tapa difusor
12	Impulsor
13	Caja difusor
14	Eje
15	Cojinete intermedio
16	Distanciador intermedio
17	Distanciador inferior
18	Manguito acoplamiento
19	Arandela
20	Tornillo
21	Tornillo
22	Camisa
23	Protector de cable
24	Cuerpo soporte aspiración
25	Rejilla aspiración
26	Cuerpo de impulsión
27	Casquillo

Atención: nº 10-11-12-13-14-15-16-22-23-27
Depende del tipo de bomba

Components

Nº	Descripción
01	O-Ring of discharge casing
02	Check valve
03	Valve sealing
04	Safety ring
05	Screw
06	Washer
07	Washer
08	Top bush
09	External bearing
10	Bearing
11	Cover difuser
12	Impeller
13	Box difusor
14	Shaft
15	Intermediate bushing
16	Intermediate bush
17	Lower bush
18	Coupling
19	Washer
20	Screw
21	Screw
22	Jacket
23	Cable guard
24	Motor coupling flange
25	Stainless suction strainer
26	Discharge casing
27	Beau

Be careful: nº 10-11-12-13-14-15-16-22-23
Depending type of pump